# 111 PERGOLA E-MOTION +



## THANK YOU FOR PURCHASING 111 Pergola e-Motion+



This manual will provide you with clear and detailed instructions on how to safely and correctly assemble and maintain your pergola, to ensure it brings you many years of use and enjoyment.

#### IMPORTANT

Warning: Important safety instructions. It is important for the safety of persons to follow these instructions. Save these instructions.

This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be made by children without supervison.

#### Intended use

This pergola is intended for outdoor domestic use in residential environments, and to protect users from direct sunlight, glare and heat . Any use or modification to the pergola not included in this manual shall be considered as improper use, which may cause considerable danger to users and property and will void the product warranty.

E-Mail: info@miradoroutdoor.de

## **TABLE OF CONTENTS**


- Before Assembling Your Pergola 3
  - Important Safety Advice 5
    - Technical Data 8
      - List of Parts 9
      - Installation 11
  - Operation of Your Pergola 32
- Problem Solving, Care & Maintenance 33
  - Warranty & Complaints Procedure 36
- Disassembly and Disposal of the Product 37
  - Certification Information 38

## BEFORE ASSEMBLING YOUR PERGOLA

### WARNING: Improtant safety instructions. Follow all instructions, since incorrect installation can lead to severe injury.

#### Make sure you have all the tools required for assembling your pergola:

In order to assemble your pergola safely and correctly, please ensure you have access to the following tools and accessories, all of which are not provided.

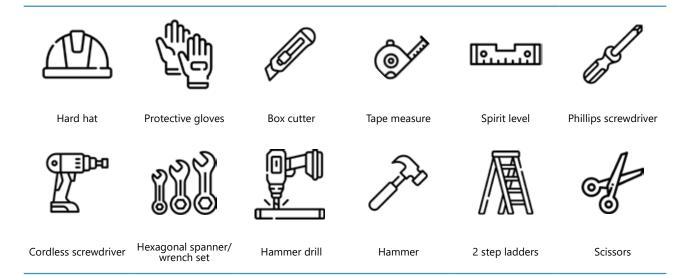

#### Check to ensure there are no missing parts:

Before you begin installation, please check that you have all the parts required to assemble your e-Motion. Please also carefully check that the quantity of parts match with that of the model you have purchased.

If any parts are missing, please refer Warranty & Complaints Procedure to contact customer service before beginning the installation.

#### Prepare the parts you will need for each step:

In the **Installation** section of the manual, each step indicates the necessary parts and quantities required to complete the step. We recommend that you prepare the parts you will need for each installation step. Doing this will save you time and effort during assembly. If possible, place the parts on cardboard or other soft surface to protect from scratching the painted surfaces.

#### Select a suitable location:



#### Warning:

Most terraces or patios are designed with a slight slope to prevent (rain) water from forming pools or reaching the house or other structures. For the perfect pergola installation, a level concrete surface without such a slope is required. Small pebbles could also prevent the pergola from being safely secured on the ground.

If the pergola is installed on an uneven surface, it may prevent accessory components from working correctly and may void the product warranty.

#### Prepare a foundation:

To prepare it, you need to:


- check for underground pipes and cables (Call 811 before you dig if you live in the USA)
- check with your local authorities regarding any building permits that may be required
- contact a reliable contractor to have concrete base if you dont have one

Do not assemble the pergola on sandy, muddy or loose soil, as the stakes do not have the suffcient anchorage to be installed in these types of soil.

## IMPORTANT SAFETY ADVICE


For the safety of all persons installing and using the pergola, it is important to follow the safety guidelines below.



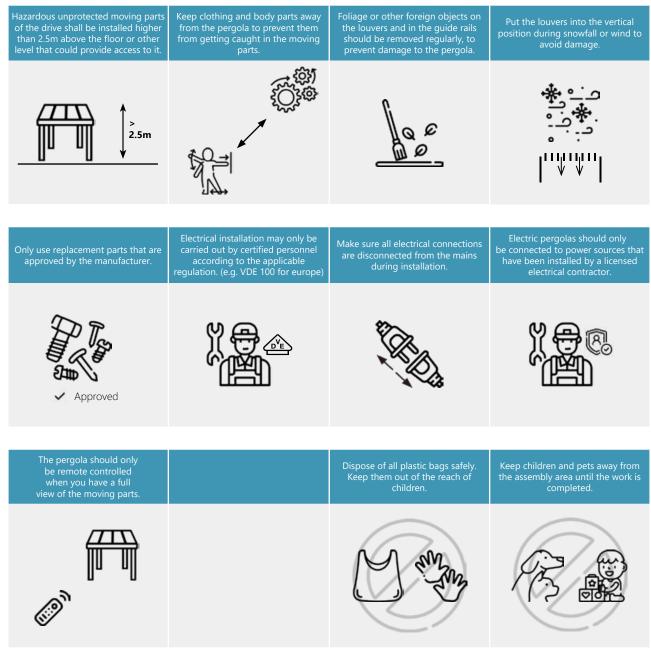

Changes to the design or configuration of equipment may not be made without consulting the manufacturer or authorized representative. Hot items such as recently used grills, fire pits etc. must not be stored under or close of the pergola. Prior to each operation, visually check the pergola for damage. If damage is visible, stop using it immediately and contact authorized personnel to repair the damage.



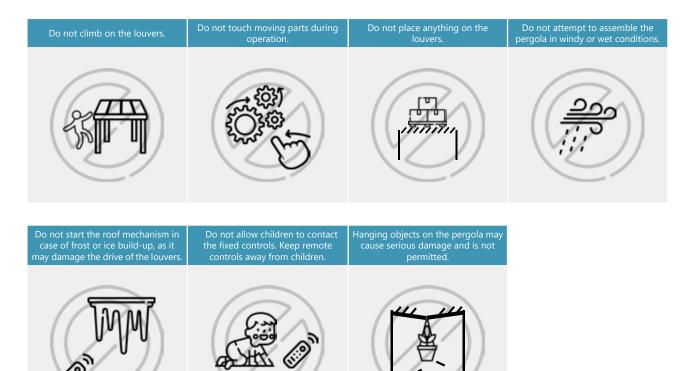

## **TECHNICAL DATA**

	Continuous Operating Cycle	10 cycles
Dennela	Sound Pressure Level	≤70 dB
Pergola	Ingress Protection Rating	IPX5
	Wind Resistance	Class 6 ( Claimed Beaufort Wind Force Scale 12 )
Linear Actuator	Input Voltage	24V DC
Linear Actuator	Ingress Protection Rating	IP66
	Input Voltage	24V DC
Control Box	Output Voltage	24V DC
	Ingress Protection Rating	IPX5
	Input Voltage	24V DC
Light LED Strip	Wattage Per Meter	≤10W
	Ingress Protection Rating	IP67
	Input Voltage	110 to 240V
Power supply	Ingress Protection Rating	IP67
	Maximum Power	350VA
	Control Method	Remote Control + App Control
	LTE Frequency band	B1, B3, B7, B8, B20, B28A, B38, B40
	LTE Max Transmit power	23dBm±2dBm
Control	GSM frequency band	EGSM900 and DCS1800
	GNSS	1559-1610MHz
	Remote control frequency band	2400MHz~2483MHz
	Remote control Max Transmit power	0dBm
	North America	West Coast: Oregon
	North America	East Coast: Virginia
Data Center		Sweden
	Europe	Amsterdam
		Frankfurt

## **LIST OF PARTS**

PLEASE NOTE that the anchor bolts provided may not be suitable for your chosen installation location. Please check before proceeding.


DO NOT USE AN IMPACT CORDLESS SCREW DRIVER TO ASSEMBLE THE PERGOLA. USE A STANDARD CORDLESS SCREW DRIVER ON THE BASE SETTING. ALL HOLES HAVE BEEN PREDRILLED OR FITTED FOR ASSEMBLY.

	REF	Dent nome	Length		
	KEF	Part name	3m/10ft.	3.6m/12ft.	4m/13ft.
Α	<u>ج</u>	Standard corner pillar	3	3	3
A2		Cabled corner pillar	1	1	1
B1		Side beam with motor	1	1	1
B2		Side beam without motor	1	1	1
С		End beam	2	2	2
D		Louver	19	23	25
G		Connecting strip	1	1	1

	REF	Part name	3m/10ft.	3.6m/12ft.	4m/13ft.		REF	Part name	3m/10ft.	3.6m/12ft.	4m/13ft.
I		Foot plate cover	4	4	4	W	Ø <b></b>	Anchor bolt M8x80mm	16	16	16
J	¢	Foot plate	4	4	4	X		Hex key (small)	1	1	1
К	00	Louver end cap	37+2	45+2	49+1	Y	<b></b>	Hex key (large)	2	2	2
L	( )	Louver end cap with control arm	1	1	1	Ζ	<u> </u>	12mm SDS Plus Drill Bit	1	1	1
Μ	ØØ	Shaft support cover	38+2	46+2	50+2	Z4 *	o.	Power supply	1	1	1
Ν		Pillar cover	4	4	4	<b>Z5</b>		LED light strip	2	2	2
0		Screw ST5.65x 45mm	24+2	24+2	24+2	<b>Z6</b>		Remote control	1	1	1
Ρ		Screw M5x 12mm	76+4	92+5	100+5	<b>Z</b> 7		2.4G and 4G Antenna	1	1	1
Q		Screw 4.2x 25mm	76+4	92+5	100+5	<b>Z8</b>		Waterproof tape	1	1	1
R	(k) ))))))))	Screw 5.5x 19mm	12+2	12+2	12+2	<b>Z</b> 9		Screw ST4.8x 13mm	4	4	4
S	Color Color	Cotter pin	19+3	23+3	25+4	Z10		Spare plastic pin	0+10	0+10	0+10




Installation Video

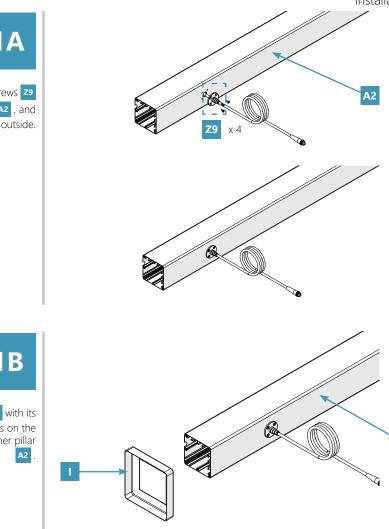

**1**A

Fix the cable flange with screws **Z9** onto the cabled corner pillar A2 , and make sure the cable is hanging outside.

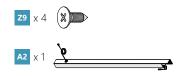





Slide the foot plate cover 1 with its wide opening facing outwards on the straight end of the cabled corner pillar



A2

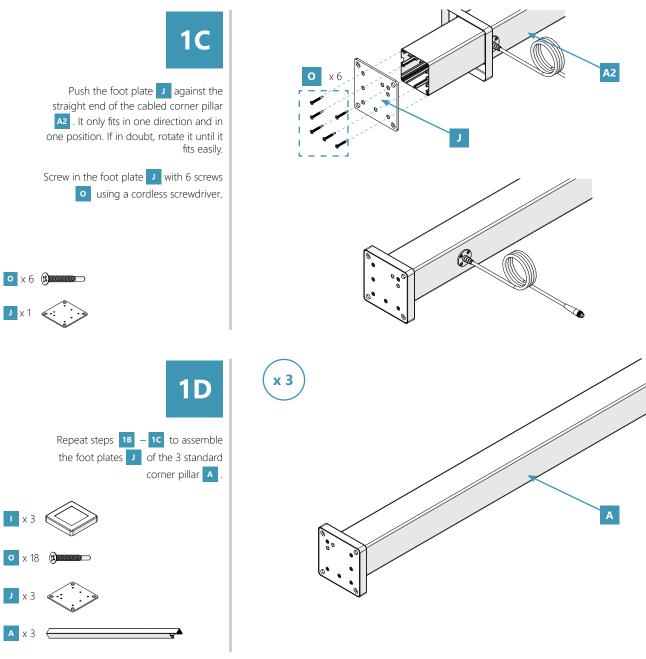


### 2. Connect the side beam with motor B1 to the cabled corner pillar A2 and a regular corner pillar A

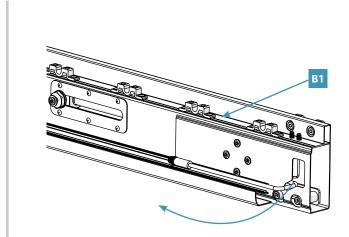



Pull out the cable at the end of the side beam with motor **B1** through the small cut-out.




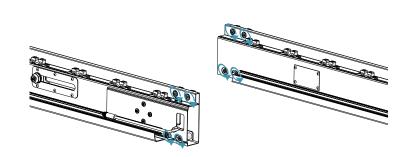




Using a hex key (large) Y, slightly loosen the 8 built-in screws at the both ends of the side beam with motor B1 (4 on each side).




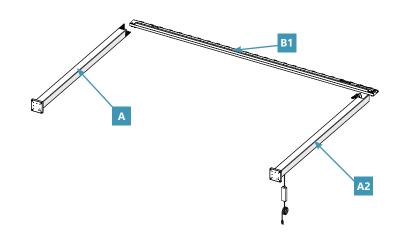



Lay two corner pillars ( A & A2 ) and place the side beam with motor B1 on the floor as shown in the picture.

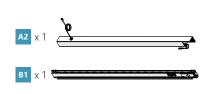

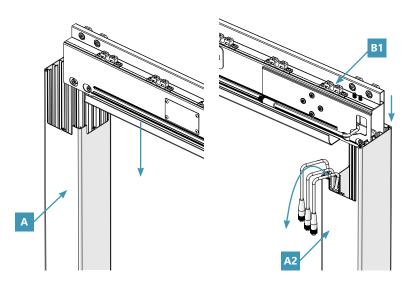


2D


Side beam with motor B1 into the grooves of the corner pillars (A & A2) in such a way that the slot nuts of the side beam with motor B1 interlock with the slots in the corner pillars (A & A2).


#### Warning:

Pull the cables out of the cabled corner pillar. Take care not to crush or squeeze the cables.

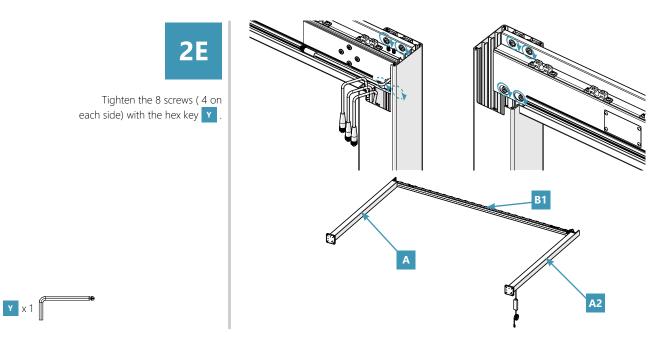

# 3. Connect the side beam without motor **B2** to the remaining two regular corner pillars **A**

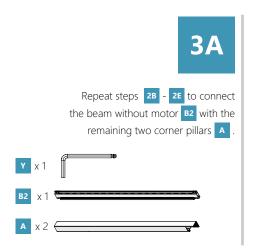

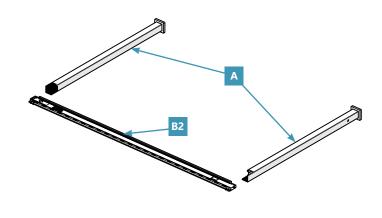

### 4. Slide in the two end beams

This phase requires four persons and at least two stepladders. Make sure that the stepladders are standing securely to avoid falling.

Only use ladders suitable for this kind of installation work.






Stand the two structures built during steps 2 and 3 in an upright position, and place them at one end beam length away from one another. Make sure that one person is supporting each corner leg ( A & A2 ) to prevent the structures from falling.


#### **Reminder:**


When determining the installation direction of the product, please consider the opening direction of the louvers as well as the desired sunshade effect.




Slightly loosen the 8 built-in screws at both ends of the end beam **c** .

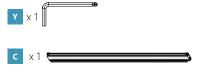


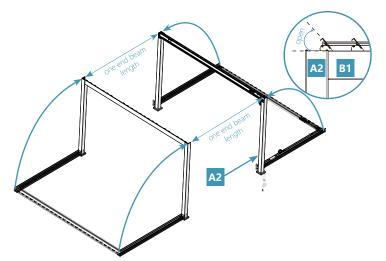

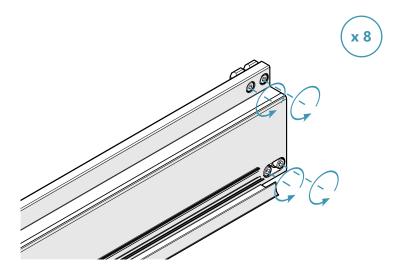

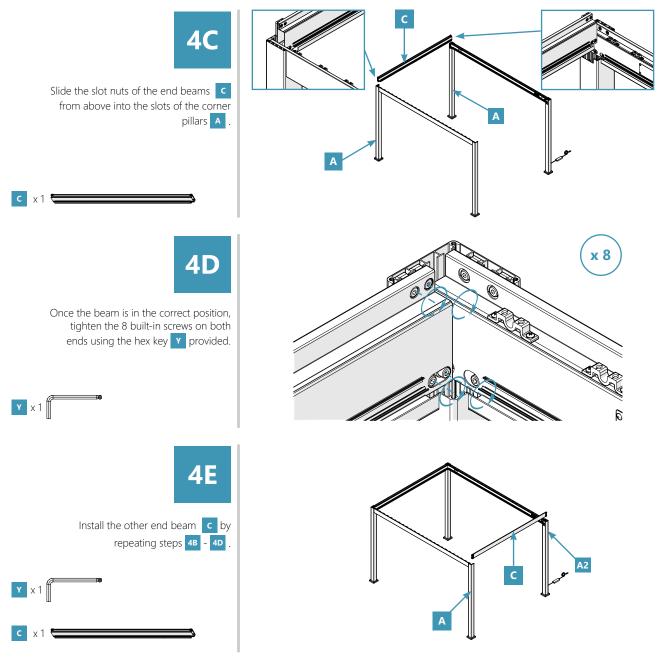


### **5. Install the LED strip lights**

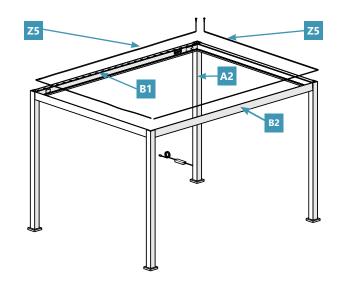



Place both LED light strips **Z5** along the grooves on the side beams (**B1** & **B2**) and end beams **C**, as shown in the figure. Put the connection socket of the LED light strip **Z5** close to the cabled corner pillar **A2**, and put the end of the LED light strip **Z5** into the top of the corresponding corner pillar if needed.



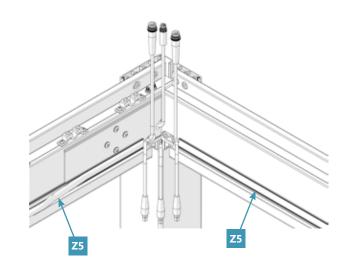




As shown in the figure, press both LED light strips 25 firmly into the light strip slots one by one to ensure they are fitted evenly.




### 6. Connect the power cables of the motor and LED strip lights 25

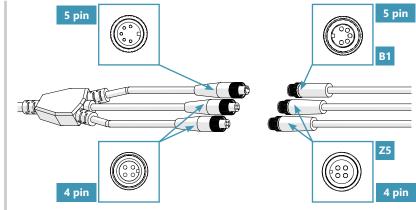




Connect the cable connector (5-pin) of the side beam with motor B1 into the corresponding connector socket on the top of the cabled corner pillar A2. Then tighten the waterproof connector

Connect the cable connector (4-pin) of the LED light strip zs into the corresponding connector socket on the top of the cabled corner pillar A2 . Then tighten the waterproof connector (there is no need to differentiate the plug sockets of the two light strips as they are the same).

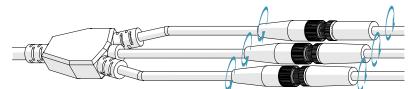


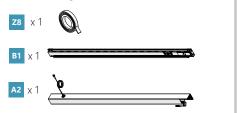

**Z5** x 2


#### Tip:

It is recommended to wrap waterproof adhesive tape on the waterproof connectors to prolong their service life.

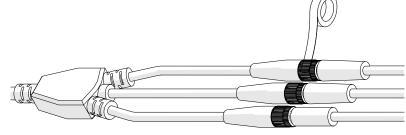




Carefully tuck all connected cables and connectors at the top of the structure back into the corner pillar.

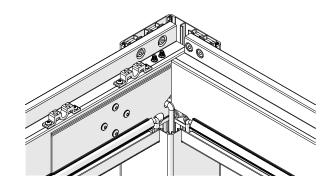


# 7. Check the alignment of the frame and the distance between the corner pillars


You are now almost done installing the main frame of the pergola. Please double check to ensure all corner pillars, beams, and cables have been installed and fitted correctly. You may have to unscrew certain bolts during this step.


You will also need a tape measure and a spirit level to complete this step.

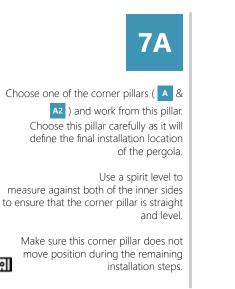

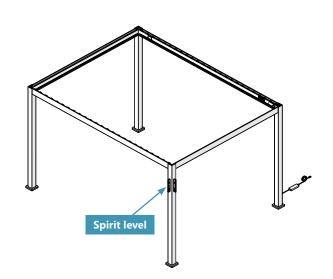



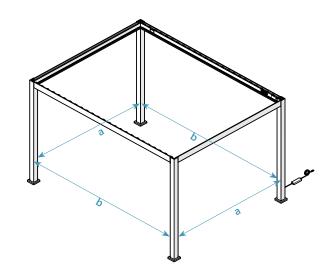

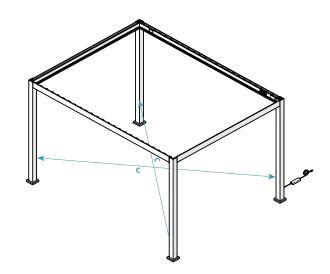

## 7B

Measure the distances between the adjacent corner pillars. Adjust accordingly and ensure the distances match those shown in the opposite figure.




õ


Size	а		b		
(m/ft)	(mm)	(inch)	(mm)	(inch)	
3x3/10x10	2790.5	109.9	2790.4	109.9	
3x3.6/10x12	2790.5	109.9	3400	133.9	
3x4/10x13	2790.5	109.9	3705	145.9	
3.6x3.6/12x12	3400	133.9	3400	133.9	
3.6x4/12x13	3400	133.9	3705	145.9	



Measure the diagonal distance between the opposite corner pillars. Adjust the other corner pillars accordingly until both diagonal distances are equal. You may have to repeat the above steps after completing the remaining steps.

Size		с
(m/ft)	(mm)	(inch)
3x3/10x10	3951	155.6
3x3.6/10x12	4403	173.3
3x4/10x13	4643	182.8
3.6x3.6/12x12	4813	189.5
3.6x4/12x13	5033	198.1

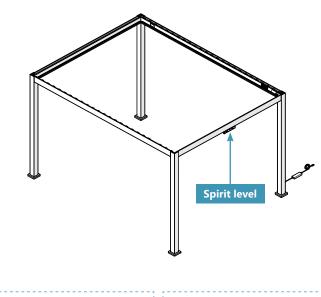

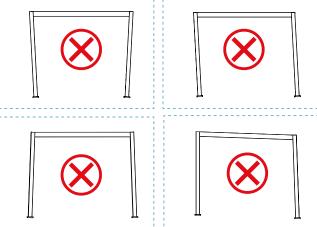




Check that all corner pillars are straight and level using a spirit level. If the corner pillars or beams are still not level, this means that your main building surface isn't sufficiently level, and that you will need to raise the corner pillars that are positioned lower than the others. (Contact qualified workers if needed.)

#### Warning:

If you do not adjust the main structure at this point, you may encounter problems when fitting the louvers and/or accessories to the frame.




### 8. Install the louvers, and connecting strip

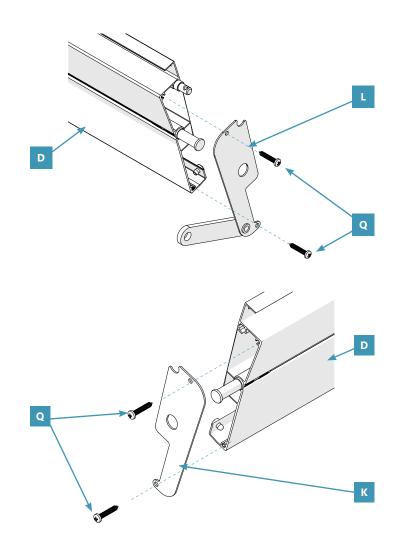





Prepare the driving louver: select one of the louvers **D** to be the driving louver.

Attach the louver end cap with control arm L to one end of the driving louver, and attach an louver end cap K to the other end of the driving louver. Use two screws Q on each side, and fix them firmly using a cordless screwdriver.

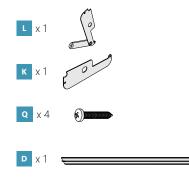

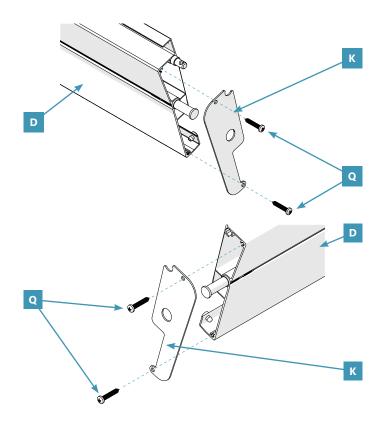

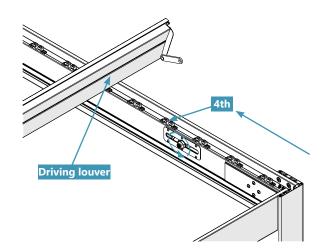

BB Prepare the regular louvers: attach the louver end caps K to each end of the


> **Q** using a cordless screwdriver. Repeat this step for all louvers.


rest of the louvers **D** with two screws

Part \ Length	3m/10ft.	3.6m/12ft.	4m/13ft.
K	36	44	48
Q ()	72	88	96
D	18	22	24



Place the louvers D on the corresponding louver shaft support on both side beams (B1 & B2 ), with each louver overlapping the next, and make sure that the driving louver is placed 4th from the left.

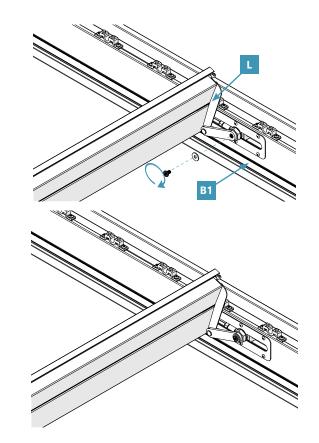

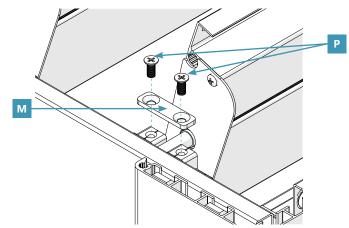




Loosen the screw and washer already attached to the beam with motor. Then fix the connecting rod L of the driving louver to the side beam with motor B1, by firmly tightening the same screw and washer, using the hexagon socket key

x





Place the rest of the louvers into the remaining shaft support brackets. Secure the louvers **D** in the shaft support brackets by fixing a shaft support cover **M** onto the shaft support brackets on both ends of each louver **D**. Use two screws **P** each and secure them with a cordless screwdriver. Repeat this step for all louvers.

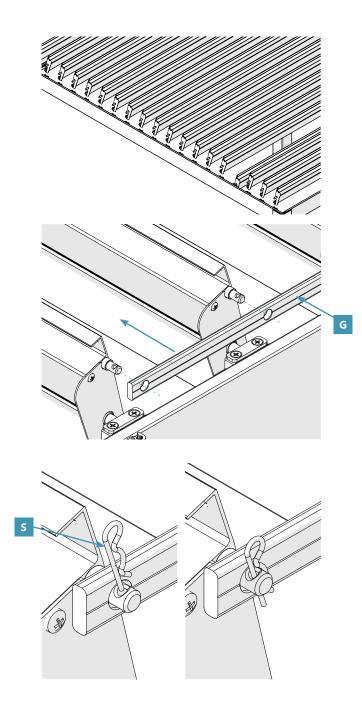




### 8F

Take the connecting strip G. Attach it to each louver fitting each of the holes onto the corresponding bolts of the louvers. Secure every bolt with a cotter pin S, inserting it through the small bolt hole.Repeat this step for all cotter pins.




# 9. Finalize the electric connection and install the pillar cover

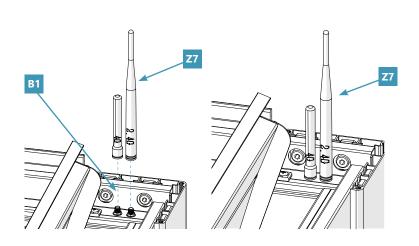


**9A** 


Install the 2.4G and 4G antenna **Z7**, and make sure they correspond to the label on the side beam with motor **B1**.



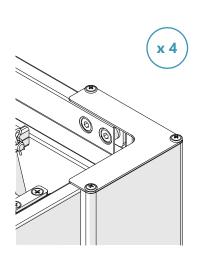

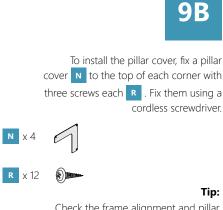

Check the frame alignment and pillar distances again by repeating **7A** - **7D** if necessary.

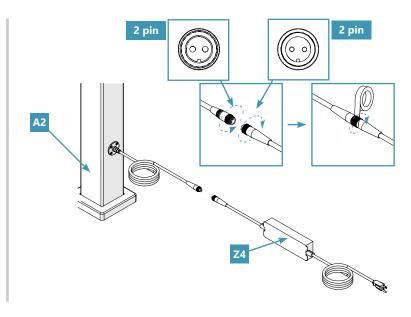

9C

Connect the cable on the base of the cabled corner pillar A2 to the cable of the power supply adapter 24 . Tighten firmly.





#### Tip:

It is recommended to wrap waterproof adhesive tape on the waterproof connectors to prolong their service life.


### **10. Pair the remote control**

**10A** 

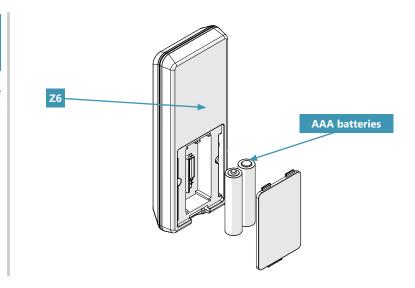

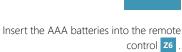



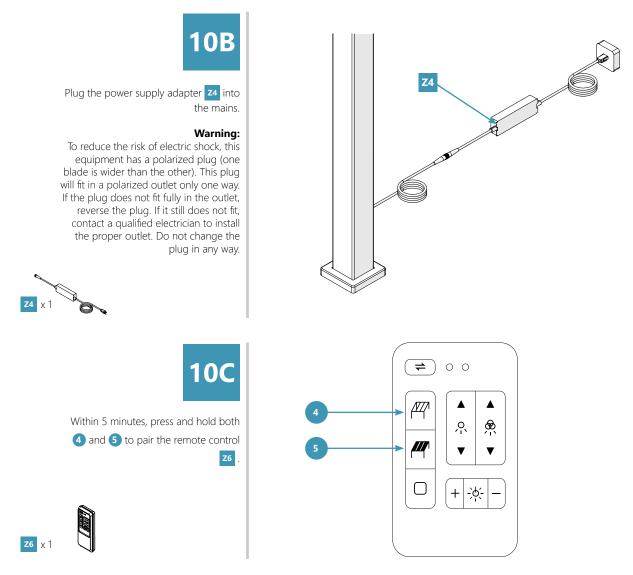

All louvers will move back and forth once to indicate that the remote control has been paired successfully.


IF PAIRING HAS NOT BEEN COMPLETED WITHIN THE 5-MINUTE TIME WINDOW, UNPLUG AND REPEAT THE PAIRING PROCESS AGAIN.

Once the remote control has been paired, fully open and close the louvers several times and test LED functions to ensure the product is in perfect working order.


For full remote control instructions, please see **OPERATION OF YOUR PERGOLA** 

### 11. Secure the corner pillars to the ground

The pergola must be firmly and permanently secured to the ground. If the ground is not level or suitable, please refer to the section "Before assembling your pergola".

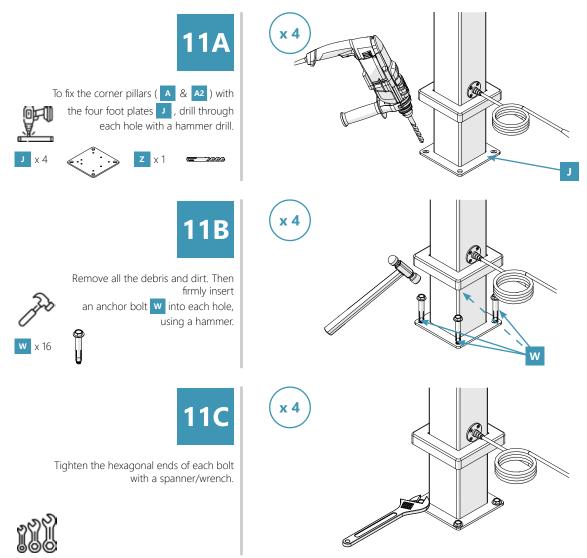


### **12. End of installation**

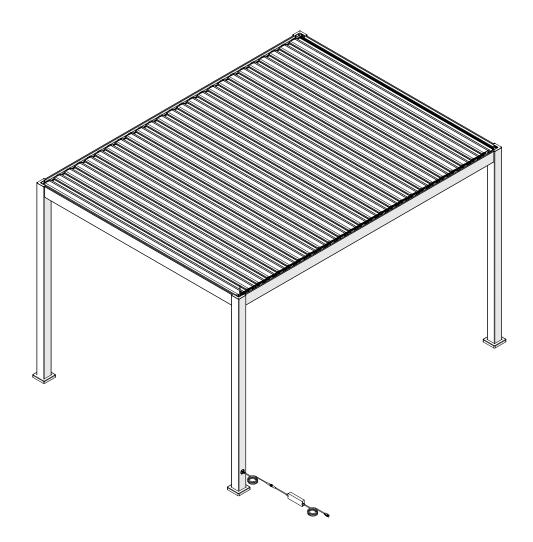

## **OPERATION OF YOUR** PERGOLA

#### How to use the remote control

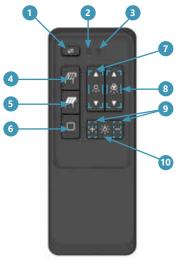

#### How to connect the product with your phone

- I. Download the Mirador app from Google Play Store or App Store by scanning the QR code below
- II. Open the Mirador app and scan the QR code on the nameplate on the beam to pair the pergola



#### If the APP shows that the product is bound by other users?

Connect the device to the mains and ensure that the light strip is turned off. Then, simultaneously press and hold the Toggle light colors  $\triangle$  and Toggle chasing effects  $\triangle$  keys for ten seconds. The light strip will flash pink o and turn off after 3 seconds. The product is successfully unbound.

#### Pairing

- I. Insert 2 AAA batteries into the remote control
- II. Plug the power adapter of the pergola into a socket
- III. Within the first 5 minutes of the pergola being powered on, press and hold both open 4and close 5 buttons for 3 seconds to pair the remote control with the pergola. (Once paired, all louvers will move back and forth once to indicate success.)

#### Operating

- 1 Toggle to control actuactor 1, actuactor 2 or both actuactors
- Led indicator for actuactor 1
- I ed indicator for actuactor 2
- 4 Open louvers
- 5 Close louvers
- 6 Stop louver movement
- 7 Single color mode: Toggle light colors
- 8 Dynamic lighting mode: Toggle chasing effects
- 9 Adjust brightness (Only works for single color mode)
- 10 Turn on/off lights

#### Notice

If you own a single pergola instead of a dual-pergola set, make sure only led indicator (2) is on. If you have problem paring or controlling the pergola

- · Stand closer to the pergola
- · Make sure to point the remote control directly at the pergola
- · Make sure batteries are not worn out and that they are inserted correctly
- Try pairing again the remote control by unplug the pergola first and follow the pairing steps

#### Warning

Non-rechargeable batteries are not to be recharged.

Different types of batteries are not to be mixed.

New and used batteries are not to be mixed.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the appliance and safely disposed of.

If the appliance is to be stored unused for a long period, the batteries should be removed. The supply terminals are not to be short-circuited.

Please refer to the problem solving section on page 33-34 if you run into any issues.


## PROBLEM SOLVING, CARE & MAINTENANCE

lssue	Explanation or action to take
The LED light strip is deformed after removing it from the packaging.	Expand the light strip and leave it at room temperature for a period of time until its shape is restored before installing it.
The surface of the LED light strip oxidizes and changes color after long-term use.	Regularly clean the surface to ensure cleanliness. If necessary, order a replacement light strip.
Abnormal noise occurs during the rotation of the louver(s).	Check if any of the louvers are deformed. If this is the case, replace them. If the louvers are not deformed but they are colliding with one another, replace the beam.
The remote control cannot be paired with the control system.	Check if the product is powered on. Check if the remote control battery is installed or if the battery is depleted. Remove the rear cover of the remote control and check if the positive and negative poles of the battery are correct. Remove the battery and reinstall it to avoid poor contact. (The details can be reviewed in the Page32) If the problem still persists, please contact customer service.
The remote control can be paired with the control system, but the app cannot.	It may take a few minutes for the device to search for the network. Please enter the network configuration diagnostic mode. Then wait patiently and confirm that the light strip flashes blue before attempting to scan the code for pairing. If there are still problems, please contact point of sale.
The LED light strip operates normally, but the liner actuator does not.	Replace the beam with motor.
During operation, the product takes time to respond, or the app does not operate in real-time.	Check the local network signal strength.
The product is a dual-pergola, and the louvers on both sides do not open or close synchronously.	Slight asynchronization is normal. If it differs by more than 1 second, please refer to the contact section on page 36.

lssue	Explanation or action to take	
Some of the light beads on the LED light strip do not work according to the instructions.	Replace the light strip.	
The flatness of the louver is damaged due to weather conditions.	Replace the affected louvers.	
The louvers cannot be reset when there is a power failure.	Remove the screws on the driver, take out the driver connected to the screws, and allow the louvers to reset automatically.	
The drain is blocked by leaves or debris. Clean the ducts and guttering of the pergola regularly.		
The casting powder on the beam surface falls off after the motor runs for long periods.	No intervention is needed under normal circumstances.	
Llow do Lanter the naturally configuration diagnostic mode?	Connect the device to the mains and ensure that the light strip is turned off. Then, simultaneously press and hold the increase brightness + and decrease brightness - keys. The light strip will blink in different colors to indicate the current network status.	
How do I enter the network configuration diagnostic mode?	<ul> <li>SIM card not detected</li> <li>Searching for Service</li> <li>Registered Successfully</li> <li>IP Obtained</li> <li>Connected to the Cloud</li> <li>SIM Card Registration Denied</li> </ul>	

### **General Care & Maintenance**

Dust and dirt will collect on the pergola and will require periodic cleaning	Use a water/detergent mixture and a soft clean cloth to clean the pergola.	Air dry or wipe with a soft clean cloth	Do not operate the awning when maintenance, such as window cleaning, is being carried out in the vicinity.

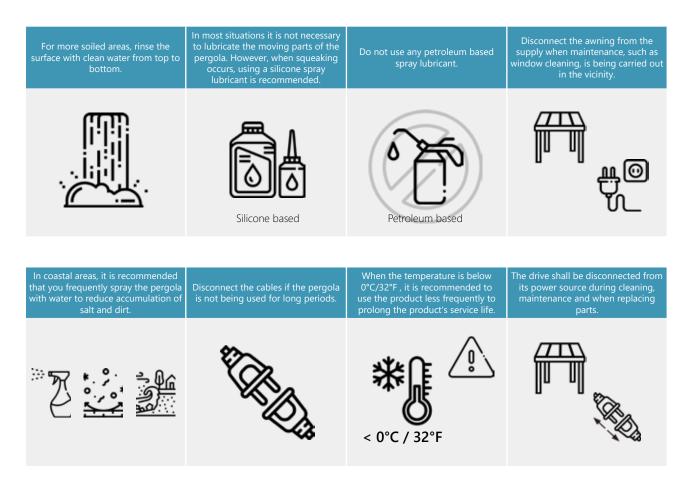

### **Periodic inspection**

### Frequently examine the installation for imbalance and signs of wear ordamage to cables and springs. Do not use if repair or adjustment is necessary.

- Check the pergola is fixed firmly to the ground.
- Check the pergola's mobile components are in good working order.
- Check that the driving parts are sufficiently lubricated.
- Check the condition of the electrical cables and inspect their mains connection.
- Check the operation of the motor's limit switch and correct where necessary.
- · Check the screws and rivet joints on the pergola.
- Check of the condition of mobile roof and bearings.

## WARRANTY & COMPLAINTS PROCEDURE

For terms and conditions of our limited warranty, please visit www.miradoroutdoor.de or contact your local Pergola sales representative.

Contact: Customer Service: info@miradoroutdoor.de

## DISASSEMBLY AND DISPOSAL OF THE PRODUCT

Incorrect disassembly of the pergola may lead to serious injury and product damage.

Disassembly should be assigned to qualified personnel with adequate training within the scope of occupational health and safety and knowledge within the scope of recycling.

#### **Disposal of used Electrical and Electronic Equipment**

When the service life of the product is over, it is necessary to disassemble it for disposal and to sort the individual materials and components in compliance with the local regulations of your country.

#### Important disposal information

In compliance with European Directive 2012/19EU on waste electrical and electronic equipment (WEEE) is it forbidden to place the waste equipment marked with the crossed bin symbol with other waste to a container intended for domestic waste. Users wishing to dispose of electronic or electrical equipment are obliged to return it to a designated waste equipment collection point.

The above statutory obligations were introduced in order to limit the amount of waste generated from waste electrical and electronic equipment, and to ensure an appropriate level of collection, recovery and recycling. The equipment does not contain hazardous components which have a particularly adverse effect on the environment or human health.



#### Utilization of used batteries

In compliance with the provisions of the Directive 2006/66/EC of the European Parliament and of the Council of 6 September 2006 on batteries and accumulators and waste batteries and accumulators and repealing Directive 91/157/EEC, the End User is obliged to transfer used portable batteries, which are no longer used as a source of energy, to an official collection point. It is forbidden to place used batteries with other waste in the same container. To prevent environmental pollution and causing a possible hazard for human and animal health, used batteries should be disposed of in the correct container at the designated collection points.

## CERTIFICATION INFORMATION

- Declaration of performance (DOP)	→ 39
- EU Declaration of Conformity	<b>→ 40</b>
- EC Declaration of Conformity	→ <b>41</b>
- UK Declaration of Conformity	→ <b>42</b>
- ETL	<b>→ 43</b>
- FCC	→ <b>4</b> 4

## **Declaration of performance (DOP)**

#### Reference no. DOP0001

#### Product name and type

Mirador Pergola and Mirador Wall Pergola/ pergola awning

#### Model name/ Unique identification code of the product:

111 Deluxe AxBm, 111 Deluxe e AxBm, 111 Deluxe e-Motion RC AxBm, 111 Deluxe e-Motion AxBm, 111 DA AxBm, 111 LED DA AxBm, 111 e-Motion DA AxBm, 111 e-Motion + AxBm, 111 Deluxe Edge AxBm, 111 Deluxe Edge e AxBm, 111 Deluxe Edge e-Motion RC AxBm, 111 Deluxe Edge e-Motion AxBm, 111 Deluxe R e AxBm, 111 D

111 Classic AxBm, 111 Classic e AxBm, 111 Classic e-Motion AxBm, 111 S AxBm, 111 LED S AxBm, 111 e-Motion S AxBm, 111 Premium AxBm, 111 Premium e AxBm, 111 Premium e-Motion AxBm, 111 A AxBm, 111 LED A AxBm, 111 e-Motion A AxBm, AxB: 3x3, 3x3.6, 3x4, 3x5.3, 3x6, 3x7.2

111 Infinite AxBm, 111 Infinite e AxBm, 111 Infinite e-Motion RC AxBm, 111 Infinite e-Motion AxBm, 111 Infinite LED AxBm, 111 Infinite e-Motion DA AxBm, 111 Infinite e-Motion + AxBm, 111 Infinite Edge AxBm, 111 Infinite Edge e AxBm, 111 Infinite Edge e-Motion RC AxBm, 111 Infinite e-Motion AxBm, AxB: 3x3, 3x3.6, 3x4, 3x5.3, 3x6, 3x7.2, 3.6x3.6, 3.6x4, 3.6x5.3, 3.6x6, 3.6x7.2, 7.2x7.2

#### **Purpose of Usage:**

External use in buildings and other construction works

#### Manufacturer:

Zhejiang Zhengte Co., Ltd. 811 Dongfang Ave, Zhejiang, PRC

#### **Documentation officer:**

Stefan Baricik Sorara Outdoor Living B.V. Cockeveld 3, 5672 AE Nuenen, The Netherlands

System for assessing and verifying the constancy of performance according to Annex V of the Construction Products Directive 305/2011/EC System 4

Declared performance (Excluding the structural part): Wind resistance = Class 6 Standard: EN 13561:2004+A1:2008

Zhejiang 20.07.23

(Chairman/President)

## **EU Declaration of Conformity**

#### Product name

Mirador Pergola

#### Model name/ Unique identification code of the product:

111 Deluxe e-Motion RC 3x7.2m, 111 Deluxe e-Motion RC 3.6x3.6m, 111 Deluxe e-Motion RC 3.6x4m, 111 Deluxe e-Motion RC 3.6x5.3m, 111 Deluxe e-Motion RC 3.6x6m, 111 Deluxe e-Motion RC 3.6x7.2m 111 Deluxe e-Motion 3x3m, 111 Deluxe e-Motion 3x3.6m, 111 Deluxe e-Motion 3x4m, 111 Deluxe e-Motion 3x5.3m, 111 Deluxe e-Motion 3x6m, 111 Deluxe e-Motion 3x7.2m, 111 Deluxe e-Motion 3.6x3.6m, 111 Deluxe e-Motion 3.6x4m, 111 Deluxe e-Motion 3.6x5.3m, 111 Deluxe e-Motion 3.6x6m, 111 Deluxe e-Motion 3.6x7.2m, 111 Deluxe Edge e-Motion 3x3m, 111 Deluxe Edge e-Motion 3x3.6m, 111 Deluxe Edge e-Motion 3x4m, 111 Deluxe Edge e-Motion 3x5.3m, 111 Deluxe Edge e-Motion 3x6m, 111 Deluxe Edge e-Motion 3x7.2m, 111 Deluxe Edge e-Motion 3.6x3.6m, 111 Deluxe Edge e-Motion 3.6x4m, 111 Deluxe Edge e-Motion 3.6x5.3m, 111 Deluxe Edge e-Motion 3.6x6m, 111 Deluxe Edge e-Motion 3.6x7.2m, 111 Deluxe R e-Motion 3x3m, 111 Deluxe R e-Motion 3x3.6m, 111 Deluxe R e-Motion 3x4m, 111 Deluxe R e-Motion 3x5.3m, 111 Deluxe R e-Motion 3x6m, 111 Deluxe R e-Motion 3x7.2m, 111 Deluxe R e-Motion 3.6x3.6m, 111 Deluxe R e-Motion 3.6x4m, 111 Deluxe R e-Motion 3.6x5.3m, 111 Deluxe R e-Motion 3.6x6m, 111 Deluxe R e-Motion 3.6x7.2m 111 Infinite e-Motion 3x3m, 111 Infinite e-Motion 3x3.6m, 111 Infinite e-Motion 3x4m, 111 Infinite e-Motion 3x5.3m, 111 Infinite e-Motion 3x6m, 111 Infinite e-Motion 3x7.2m, 111 Infinite e-Motion 3.6x3.6m, 111 Infinite e-Motion 3.6x4m, 111 Infinite e-Motion 3.6x5.3m, 111 Infinite e-Motion 3.6x6m, 111 Infinite e-Motion 3.6x7.2m, 111 Infinite Edge e-Motion 3x3m, 111 Infinite Edge e-Motion 3x3.6m, 111 Infinite Edge e-Motion 3x4m, 111 Infinite Edge e-Motion 3x5.3m, 111 Infinite Edge e-Motion 3x6m, 111 Infinite Edge e-Motion 3x7.2m, 111 Infinite Edge e-Motion 3.6x3.6m, 111 Infinite Edge e-Motion 3.6x4m, 111 Infinite Edge e-Motion 3.6x5.3m, 111 Infinite Edge e-Motion 3.6x6m, 111 Infinite Edge e-Motion 3.6x7.2m 111 Classic e-Motion 3x3m, 111 Classic e-Motion 3x3.6m, 111 Classic e-Motion 3x4m, 111 Classic e-Motion 3x5.3m, 111 Classic e-Motion 3x6m, 111 Classic e-Motion 3x7.2m Software: ZTC1 EU M2 Boot Main Accessories: Remote control, 3V DC Battery

#### Purpose of Usage:

External use in buildings and other construction works

#### Manufacturer:

Zhejiang Zhengte Co., Ltd. No. 588 Linhai Ave., 317000 Linhai, Zhejiang, PRC

#### **Documentation officer:**

Stefan Baricik Sorara Outdoor Living B.V. Cockeveld 3, 5672 AE Nuenen, The Netherlands


#### Meets the provisions of Machinery Directive 2006/42/EC

#### Harmonised standards used:

EN 13561:2015, EN 60335-1:2012+A11:2014+A13:2017+A1:2019 + A14:2019 + A2:2019+A15:2021, EN 60335-2-97:2006+A11:2008+ A2:2010+ A12:2015, EN 62233:2008, EN IEC 55014-1:2021, EN IEC 55014-2:2021 EN IEC 55015:2019/A11:2020, EN 61547:2009, EN IEC 61000-3-2:2019/A1:2021, EN 61000-3-3:2013/A2:2021, EN 301 489-1 V2.2.3:2019, EN 301 489-3 V2.3.2:2023, EN 301 489-52 V1.2.1:2021, EN 300 440 V2.1.1, EN 300 440 V2.2.1, EN 301 908-1 V15.1.1, EN 301 908-13 V13.2.1, EN 50663:2017, EN 62311:2008, EN 50665:2017

#### Notified Body: TÜV SÜD Danmark ApS NB No.: 2443 Certificate No.: DK-RED002818 i01, DK-RED002821 i01

Zhejiang 28.09.23

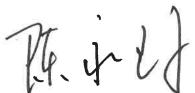

(Chairman/President)



# EC Declaration of Conformity

#### Product name and type

Mirador Pergola and Mirador Wall Pergola/ pergola awning

#### Model name/ Unique identification code of the product:

111 Deluxe AxBm, 111 Deluxe e AxBm, 111 Deluxe e-Motion RC AxBm, 111 Deluxe e-Motion AxBm 111 Deluxe Edge AxBm, 111 Deluxe Edge e AxBm, 111 Deluxe Edge e-Motion RC AxBm, 111 Deluxe Edge e-Motion AxBm 111 Deluxe R AxBm, 111 Deluxe R e AxBm, 111 Deluxe R e-Motion RC AxBm, 111 Deluxe R e-Motion AxBm AxB: 3x3, 3x3.6, 3x4, 3.6x3.6, 3.6x4, 3x5.3, 3x6, 3x7.2, 3.6x5.3, 3.6x6, 3.6x7.2

111 Classic AxBm, 111 Classic e AxBm, 111 Classic e-Motion AxBm 111 Premium AxBm, 111 Premium e AxBm, 111 Premium e-Motion AxBm, AxB: 3x3, 3x3.6, 3x4, 3x5.3, 3x6, 3x7.2

111 Infinite AxBm, 111 Infinite e AxBm, 111 Infinite e-Motion RC AxBm, 111 Infinite e-Motion AxBm AxB: 3.6x3.6, 7.2x7.2

#### Purpose of Usage:

External use in buildings and other construction works

#### Manufacturer:

Zhejiang Zhengte Co., Ltd. 811 Dongfang Ave, Zhejiang (China)

#### **Documentation officer:**

Stefan Baricik Sorara Outdoor Living B.V. Cockeveld 3, 5672 AE Nuenen (The Netherlands)

#### Meets the provisions of Machinery Directive 2006/42/EC

#### Harmonised standards used:

EN 13561:2015 EN 60335-1:2012+A11:2014+A13:2017+A1:2019 + A14:2019 + A2:2019+A15:2021 EN 60335-2-97:2006+A11:2008+ A2:2010+ A12:2015 EN 62233:2008

Zhejiang 20.07.23

(Chairman/President)

### UK Declaration of Conformity

#### Product name and type

Mirador Pergola

#### Model name/ Unique identification code of the product:

111 Deluxe AxBm, 111 Deluxe e AxBm, 111 Deluxe e-Motion RC AxBm, 111 Deluxe e-Motion AxBm 111 Deluxe Edge AxBm, 111 Deluxe Edge e AxBm, 111 Deluxe Edge e-Motion RC AxBm, 111 Deluxe Edge e-Motion AxBm 111 Deluxe R AxBm, 111 Deluxe R e AxBm, 111 Deluxe R e-Motion RC AxBm, 111 Deluxe R e-Motion AxBm AxB: 3x3, 3x3.6, 3x4, 3.6x3.6, 3.6x4, 3x5.3, 3x6, 3x7.2, 3.6x5.3, 3.6x6, 3.6x7.2

111 Classic AxBm, 111 Classic e AxBm, 111 Classic e-Motion AxBm 111 Premium AxBm, 111 Premium e AxBm, 111 Premium e-Motion AxBm, AxB: 3x3, 3x3.6, 3x4, 3x5.3, 3x6, 3x7.2

111 Infinite AxBm, 111 Infinite e AxBm, 111 Infinite e-Motion RC AxBm, 111 Infinite e-Motion AxBm AxB: 3.6x3.6, 7.2x7.2

#### Purpose of Usage:

External use in buildings and other construction works

#### Manufacturer:

Zhejiang Zhengte Co., Ltd. 811 Dongfang Ave, Zhejiang (China)

#### **Documentation officer:**

Stefan Baricik Sorara Outdoor Living B.V. Cockeveld 3, 5672 AE Nuenen (The Netherlands)


#### Meets the provisions of Supply of Machinery (Safety) Regulations 2008 (No. 1597)

#### Harmonised standards used:

EN 13561:2015 EN 60335-1:2012 EN 60335-1:2012/AC:2014 EN 60335-1:2012/A11:2014 EN 60335-1:2012/A13:2017 EN 60335-1:2012/A15:2021 EN 60335-2-97:2006 EN 60335-2-97:2006/A12:2015

Zhejiang

20.07.23

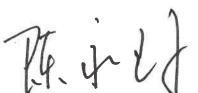

(Chairman/President)

#### 42

## **ETL LISTED MARK**



#### Conforms and Certified to standard Door, Drapery, Gate, Louver, and Window Operators and Systems [ANSI/CAN/UL 325:2017 Ed.7+R:28Feb2020]

ETL is a Certification Program provided by Intertek, which is a Recognized Testing Laboratory (NRTL) in the United States , and is accredited by institutes and associations such as ANSI, A2LA, and UKAS. The Mirador 111 DA e-Motion+ is ETL certified in the United States of America and Canada under Control Number 5026666.

### **FCC INFORMATION**



#### Supplier's Declaration of Conformity Compliance Information

Unique Identifier	
Product Description	Mirador Pergola
Model Number	111 e-Motion+
Trade Name	Mirador

#### FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party - U.S. Contact Information			
Company:	Sorara Outdoor Living USA, Inc.		
Address:	15271 Fairfield Ranch Rd. , Ste# 180, Chino Hills, CA 91709		
Telephone or internet contact information:	909-597-5930 – Hello@Sorara.com		

Warning: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

#### For Pergola:

MPE Requirements

To satisfy FCC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.

#### For remote control:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.







WWW.MIRADOROUTDOOR.DE